

MLT ONE/TWO/THREE PROTECTION COVER

IMPORTANT INSTRUCTIONS!



The MLT protection cover is for temporary rain and transport protection. It can be used above or below the truss. The latter is for securing the PAN-TILT movement of the Moving-Light.

The protection cover is not made for permanently outdoor applications and does not protect against cold, heat, corrosion, vandalism or theft.



In the first step the protection cover is connected to the lower tube using the clamps. The tarpaulin hangs parallel to the pipe. First mount the clamp on the side **WITHOUT** the spring in the shaft on your truss. You can determine which side this is by simply rotating the mounting bracket around the shaft axis.

Then bring the spring to the desired preload. You decide how strong the preload should be by the number of turns around the shaft axis. With every turn, the preload increases.

Then mount the second clamp. Ensure the insertion tube in the hem at the end of the raincover is correctly inserted and protrudes evenly from the tarpaulin at both ends so that the pre-tensioned tarpaulin cannot unwind by itself.



In the second step the tarpaulin is pulled either under or over the truss and connected to the lower opposite tube by using the clip.