

BroadWeigh Configuration



Up to 100 BroadWeigh Shackles



800 m Wireless Range



BroadWeigh Wireless USB Base Station
Displays data from load shackles and allows configuration of all parts of the system

And / Or



BroadWeigh Wireless Handheld Display
Displays data from load shackles and allows the user to "sleep" and "wake" the system

Up to 100 BroadWeigh Shackles